

Cuisinart®



Instruction & Recipe Booklet

Cordless Rechargeable Hand Mixer - RHM-100XA

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.



IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING

When using any electrical appliance, especially when children are present, **basic safety precautions should always be taken to reduce the risk of fire, electric shock and/or injury**, including the following:

- This appliance is intended for **HOUSEHOLD USE ONLY** and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - clients in hotels, motels and other residential type environments;
 - bed and breakfast settings
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack experience and knowledge - unless, they have been given instruction and or guidance concerning use of the appliance by a person responsible for their safety.
- Use only on an appropriate benchtop and indoors only, sitting away from flammable materials such as curtains, draperies and walls of similar nature as a fire may occur if comes in contact or becomes covered during operation.
- Do not place on or near a hot gas, electric burner, or in a heated oven.
- To reduce the risk of fire or electric shock, do not operate any heating appliance beneath or near the mounted charging handle of the hand mixer.
- Do not mount or store hand mixer over or near a portion of a heating or cooking appliance, or a sink/washbasin.
- Never submerge any portion of the hand mixer motor in liquids. Only the beaters, have been designed for submersion in liquids. If hand mixer falls into liquid, remove immediately. Carefully remove, clean and dry mixer thoroughly before continuing.
- Keep hands, hair, clothing, as well as utensils, including spatulas away from the moving beaters during operation. A spatula may be used when the hand mixer is not operating.
- When mixing liquids, use a tall container or mix small quantities at a time to reduce spillage.
- Use extra care when working with hot liquids to avoid splattering.
- To safely turn motor off release the Power button.
- To prevent unintentional starting. Never press the Auto Lock/Unlock button on the power handle while pressing the Power button.
- To avoid damage to the USB cord, do not let cord meet any hot surfaces including a stovetop.
- The USB power adapter and USB cable should be plugged into an electrical outlet away from sink or hot surface.
- Do not use an extension cord. Plug USB power adapter directly into an electrical outlet.
- Unplug the USB power adapter from the outlet before attempting any routine cleaning, assembling, disassembling or cleaning of the charger.
- Do not operate a damaged USB power adapter and replace immediately.
- Recharge only with the USB power adapter specified by the manufacturer. A USB power adapter (5VDC/2000mA output) that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Do not let USB cable hang over edge of table or counter.
- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C may cause an explosion.
- Do not incinerate the hand mixer, even if severely damaged; the batteries contain lithium ion which may explode in high temperatures and in a fire.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Under abusive/extreme conditions leaks from battery cells can occur. If the liquid gets on

the skin, (1) wash quickly with soap and water or (2) neutralise with mild acid such as lemon juice or vinegar. If the liquid gets into eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention

- Recommended ambient charging and storage temperature: 10°C–40°C.
- The use of attachments or accessories are not recommended by Cuisinart may be hazardous.
- Make sure the appliance is off and the motor/ beaters have stopped completely before taking off attachments, and before cleaning.
- Remove detachable beaters from the hand mixer before washing the beaters.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.
- While cleaning do not try to dislodge any food when hand mixer is plugged in; always unplug it when cleaning.
- Any other servicing should be performed by an authorised service representative.
- DO NOT LEAVE OUTDOORS.

SAVE THESE INSTRUCTIONS BEFORE THE FIRST USE

Before using the Cuisinart® Cordless Rechargeable Hand Mixer for the first time, we recommend you wipe it with a clean damp cloth to remove any dirt or dust. Dry it thoroughly with a soft, absorbent cloth and handle carefully.

The batteries have not been fully charged. Before the first use, the batteries must be charged until the 3 blue LED lights are illuminated. See OPERATING INSTRUCTIONS on page 5.

CONTENTS

| | |
|---|---|
| Important Safeguards..... | 2 |
| Before the First Use..... | 3 |
| Parts & Features | 4 |
| Quick Tips Guide..... | 5 |
| Operating Instructions..... | 5 |
| Battery-Life Indicator | 5 |
| Top-Up Charge | 6 |
| Inserting Beaters | 6 |
| Turning Mixer On & Changing Speeds | 6 |
| Cleaning & Maintenance..... | 6 |

PARTS & FEATURES



A. Blue LED Power Indicator Lights

LED lights indicate battery capacity. See BATTERY-LIFE INDICATOR table on page 5 for full description.

B. Speed Control

Provides fingertip control for all 5 speeds.

C. Power Button

Press the power button to power up the mixer.

D. USB Cable Port

Located on the back of the hand mixer.

E. Charger/Power Adapter

F. USB cable

G. Detachable Inserting Beaters

Two strong beaters for easy aerating, mixing, & whipping. Designed with no center post to prevent ingredients from clogging up beaters. Beaters are easy to clean & dishwasher safe. Each beater has a specific power port on the bottom of the housing.

H. Heel Rest

Allows mixer to rest upright on benchtop.

I. Textured-Grip Handle


For ease of movement while mixing.

J. BPA Free (not shown)

All materials that come in contact with food are BPA free.

K. 7.4 Volt Battery (not shown)

Powerful enough to easily cut through cookie dough.

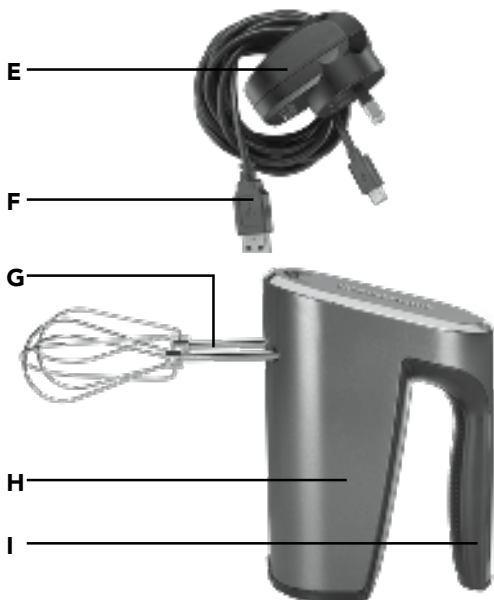

QUICK TIPS GUIDE

The hand mixer should always be set on the lowest speed when first starting to mix.

| Setting | Mixing Techniques |
|---------|---|
| Speed 1 | <ul style="list-style-type: none">• Start mixing most ingredients together• Combine dry ingredients• Start whipping cream• Start whipping egg whites |
| Speed 2 | <ul style="list-style-type: none">• Start creaming butter & sugar• Add flour to batters, or liquids to dry ingredients• Mash potatoes or squash e.g. pumpkin & butternut• Mix heavy cookie doughs• Add nuts, chips or dried fruit to doughs/batters• Add eggs to doughs/batters• Mix pudding ingredients• Cut cold butter into dry ingredients (for pie doughs, biscuits & pastries) |
| Speed 3 | <ul style="list-style-type: none">• Complete beating cake mixes or batters• Complete mixing frostings• Whip potatoes or squash• Beat whole eggs or yolkschop. |
| Speed 4 | <ul style="list-style-type: none">• Cream butter & sugar until light & fluffy• Whip egg whites |
| Speed 5 | <ul style="list-style-type: none">• Whip butter or cream cheese to light & fluffy consistency (for dips & spreads)• Complete whipping cream• Complete whipping egg whites to meringues |

OPERATING INSTRUCTIONS

BATTERY LIFE

The batteries in your Cordless Rechargeable Hand Mixer have not been fully charged.

Before the first use, the batteries must be charged until all 3 blue battery indicator lights illuminate. With a full charge, your hand mixer will run for approximately 20 minutes, depending on the load.

Your mixer will be fully charged in approximately 2 hours.

BATTERY-LIFE INDICATOR

When Battery-Life Indicator/LED Light Bar displays 3 solid blue power lights, battery capacity is 95%.

NOTE: 95% charged for a lithium-ion battery is considered fully charged.

| Battery Capacity | Indicator |
|------------------|--|
| 70%-95% | First & second lights are solid & third light is flashing. |
| 40%-70% | First light is solid & second light is flashing. |
| < 40% | First light is flashing & others are off. |

TOP-UP CHARGE FEATURE


Your Cordless Rechargeable Hand Mixer is equipped with a top-up charge feature. If your power handle runs out of power, you can “top-up” your mixer:

- Charge for 15 minutes to get **25 seconds of runtime.**
- Charge for 30 minutes to get **1 minute and 45 seconds of runtime.**
- Charge for 60 minutes to get **5 minutes and 45 seconds of runtime.**
- Charge for 2 hours for **20 minutes of runtime** (full charge).

NOTE: Do not leave your hand mixer uncharged for an extended period of time, as it will affect the life of the rechargeable battery.

INSERTING BEATERS

With the mixer turned OFF, insert beater/s with collar into the larger hole. Push beater in until it clicks into place. Insert the beater without collar into the smaller hole. Push beater in until it clicks into place.

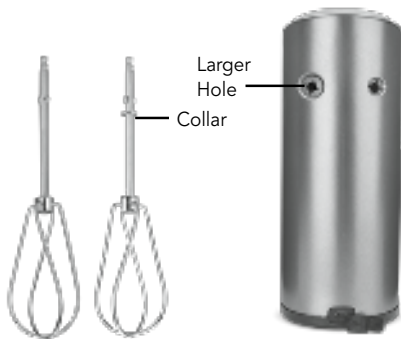

TURNING MIXER ON & CHANGING SPEEDS

1. To turn the hand mixer on, press the power button
2. Press the speed button to raise your speed from 1 through to 5.

CLEANING & MAINTENANCE

- Before cleaning the Cordless Rechargeable Hand Mixer, press the power button to ensure the mixer is off.
- After use always remove beaters from the mixer and wash in warm sudsy water, or in a dishwasher.
- When cleaning, NEVER PUT THE HANDLE/ MOTOR IN WATER OR OTHER LIQUIDS.
- Wipe with a damp cloth or sponge. Do not use abrasive cleansers, which could scratch the surface.
- Do not leave outdoors.
- Any other servicing should be performed by an authorised service representative.

©2021 Cuisinart
Suite 101 Ground Floor
18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Visit our Website:
www.cuisinart.com.au

Printed in China

IB-20/229A